


NOTES:-

The Following Berths Also Transmit To Horsham
CSR STD For IDC, TRUST And CSR:
0620, 0621, 0622, 0624, 0625, 0626, 0627, 0628, 0629,
0630, 0632, 0631, 0832, 0885, 0887, 0891, 0892, 0893,
0894 & HM02.

With The Exception Of Alarm Berths, All Berths Synchronise With Three Bridges ITD (TBTD).

Handover And Fringe Berths Are Explicitly Marked.

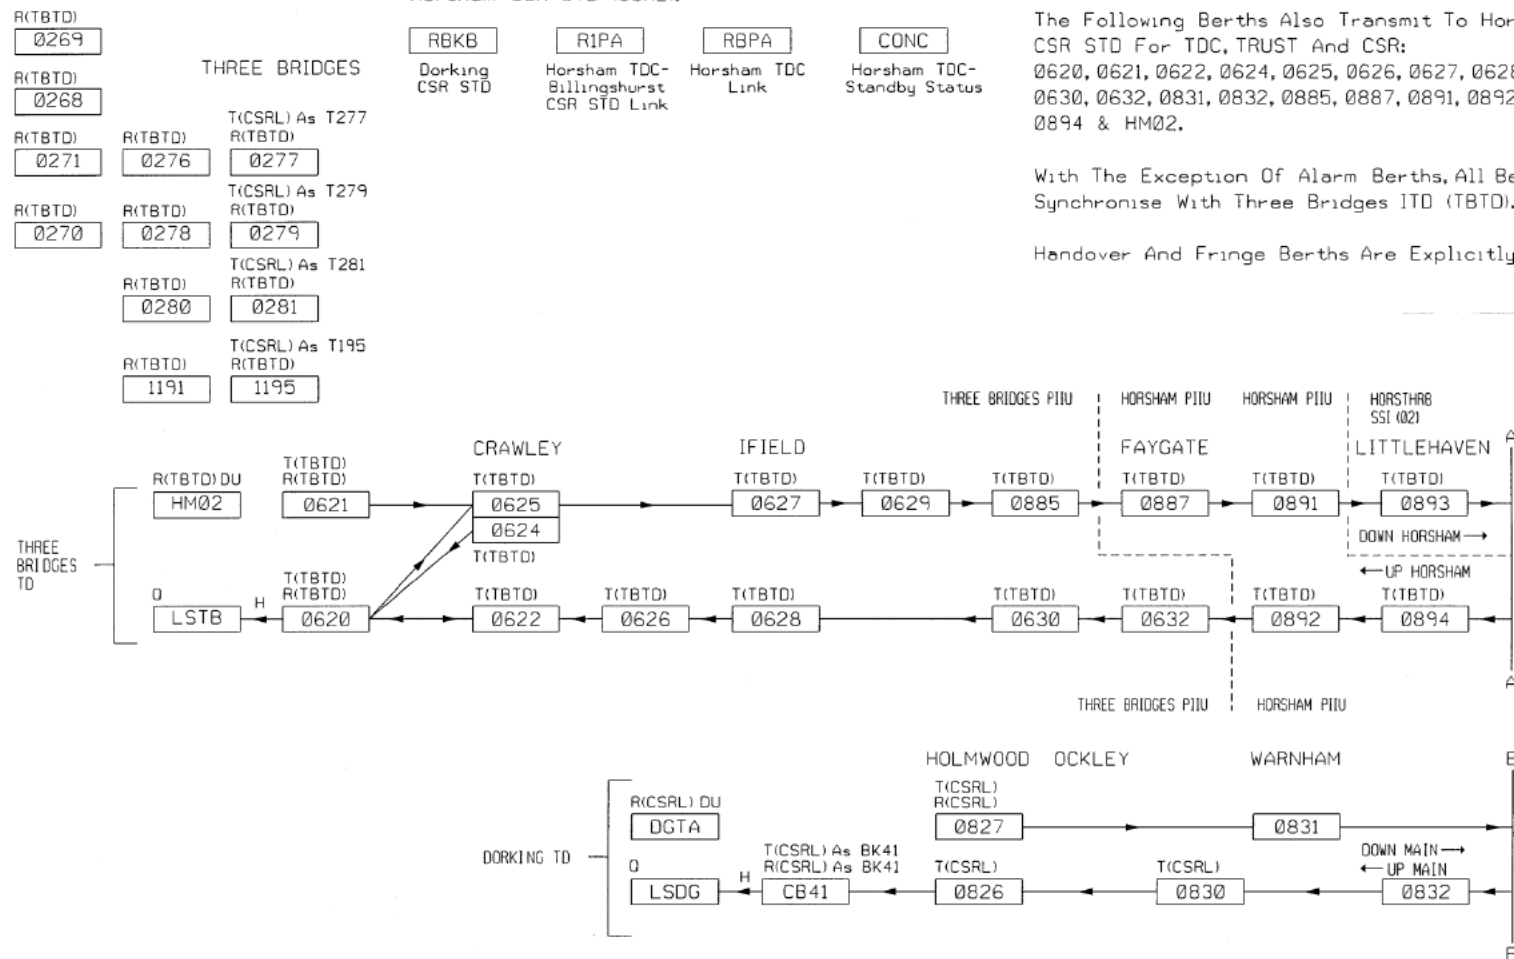

CONTINUED ON
3HM-TD-B5-06

TESTER NAME			SIGNATURE		DATE	ACTIVITY		COMPLETE	DATE	Source Record Updated			Network Records Group		Network Rail	
1						Prep. Inspection				Version	Print	Check		THREE BRIDGES ASC	Drawing No	
2						Prep. W.C. and Cont								ORSHAM PANEL 7	3HM-TD-BS-005	
3						Prep. S. & F./C.F.T.								ORSHAM DTD DATABASE	Last Full	Date
4						Cable core Loc. End								TEPPING BLOCK SCHEMATIC	Correlation	Version
5						Cable core Equ. End								RAWLEY AND HOLMWOOD	Current	
						Changeover Comp									Version	PB1
Complete tester details in your own check marking colour. Sign off for completed activities.																